

**Addendum to H-58-11-AMAM-13
FUEL SYSTEM**

Inspect uninstalled Fuel Check Valve, PN 406-360-600-101, opening for presence of internal valve. **WARNING:** Do Not Disassemble Valve. Visually check to ensure internal valve is secure and does not move in the housing. Inspect for damaged threads, Inspect housing for cracks, corrosion, or obvious defects. If damage is found, no repair is authorized. Dispose of in accordance with established procedures .

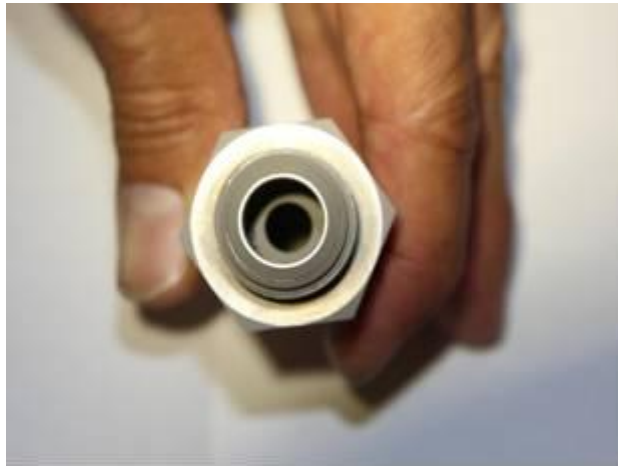


Figure 1: Unserviceable



Figure 2: Serviceable

**Addendum to H-58-11-AMAM-13
FUEL SYSTEM**



Figure 3: Ground Terminal incorrectly secured under Fuel Inlet Shutoff Valve Arm.

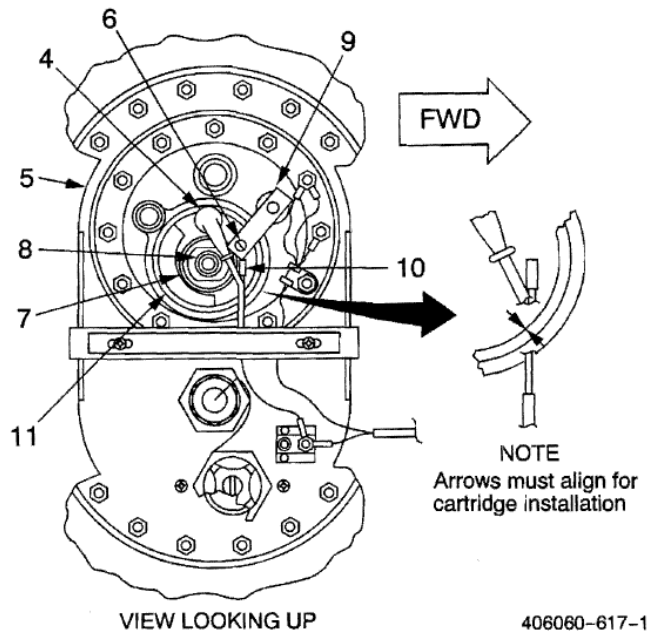


Figure 4: Route Ground Wire Terminal (10) as shown.